


Instructions to update to 24.1.2 via USB stick:

1. Download the [CureControl .jar for Pro Electronics Kit](#) file and save it to a USB flash drive.
2. Start your machine and insert the flash drive into the front USB port.
3. Go to the Settings tab in CureControl.
4. Select the button labeled "Update Software". A popup will appear, select "Yes".

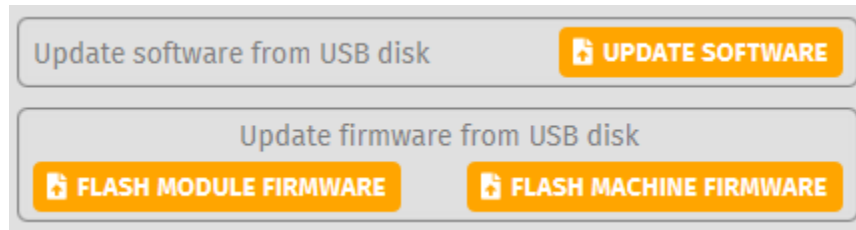

5. A file explorer will open. Select your flash drive from the list on the left of the file explorer. It should appear below "Downloads" and above "Documents".
6. Once opened, select the file you downloaded in step #1. Once selected, tap the "Open" button in the top right corner of the file explorer.
7. After a few seconds, a popup will appear, select "Restart System".
8. Your machine will now update. Once complete, CureControl will boot up. This whole process will take a few minutes.